




LEADING PARTNER IN THE WORLD OF METALS

**Instruction QM-Documentation App SMS-group Rev.3 - 08.03.2021
„Documentation Upload“.**


Daniel Nottelmann

SMS  **group**

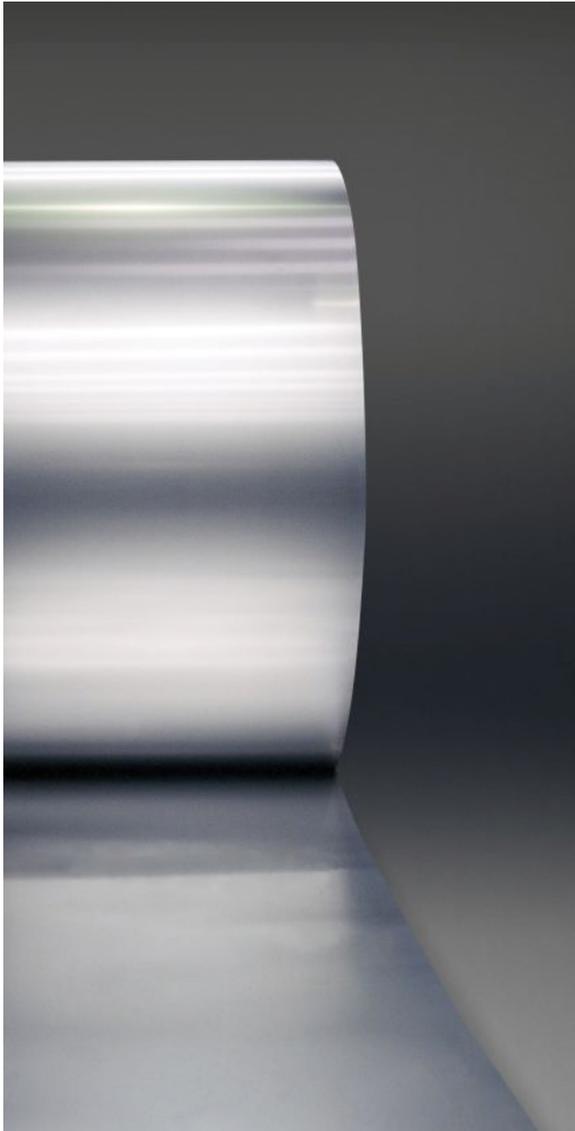


1. **Call up QM Documentation App**
2. **Enter order number**
3. **Start selection**
4. **Open order items**
5. **Select applicable order item**
6. **Open upload window**
7. **Selection type of inspection**
8. **Single and multiple selection of inspection type**
9. **Set document language**
10. **Drag one file into upload field**
11. **Upload one PDF file**
12. **Open documentation**
13. **Jump back in views**
14. **Delete documentation**
15. **Additional check types in menu bar**

1. Open the QM Documentation App. Click on tile.

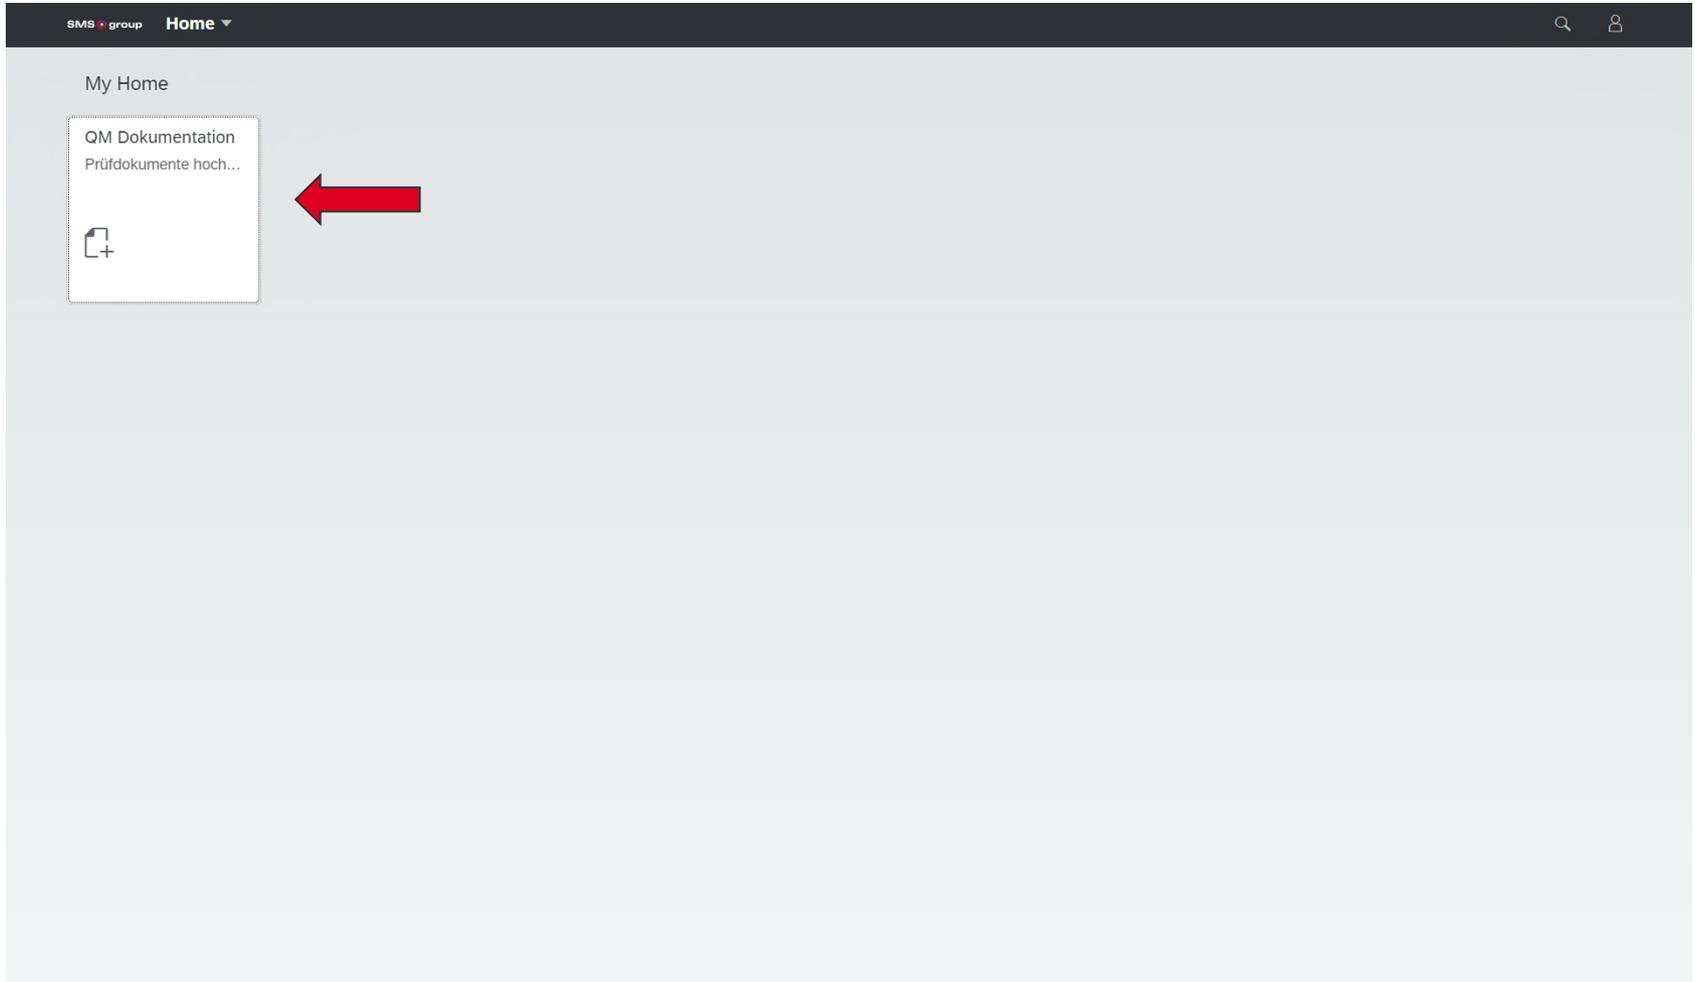

2. Enter order number under purchase document. The other input filters remain unfilled.

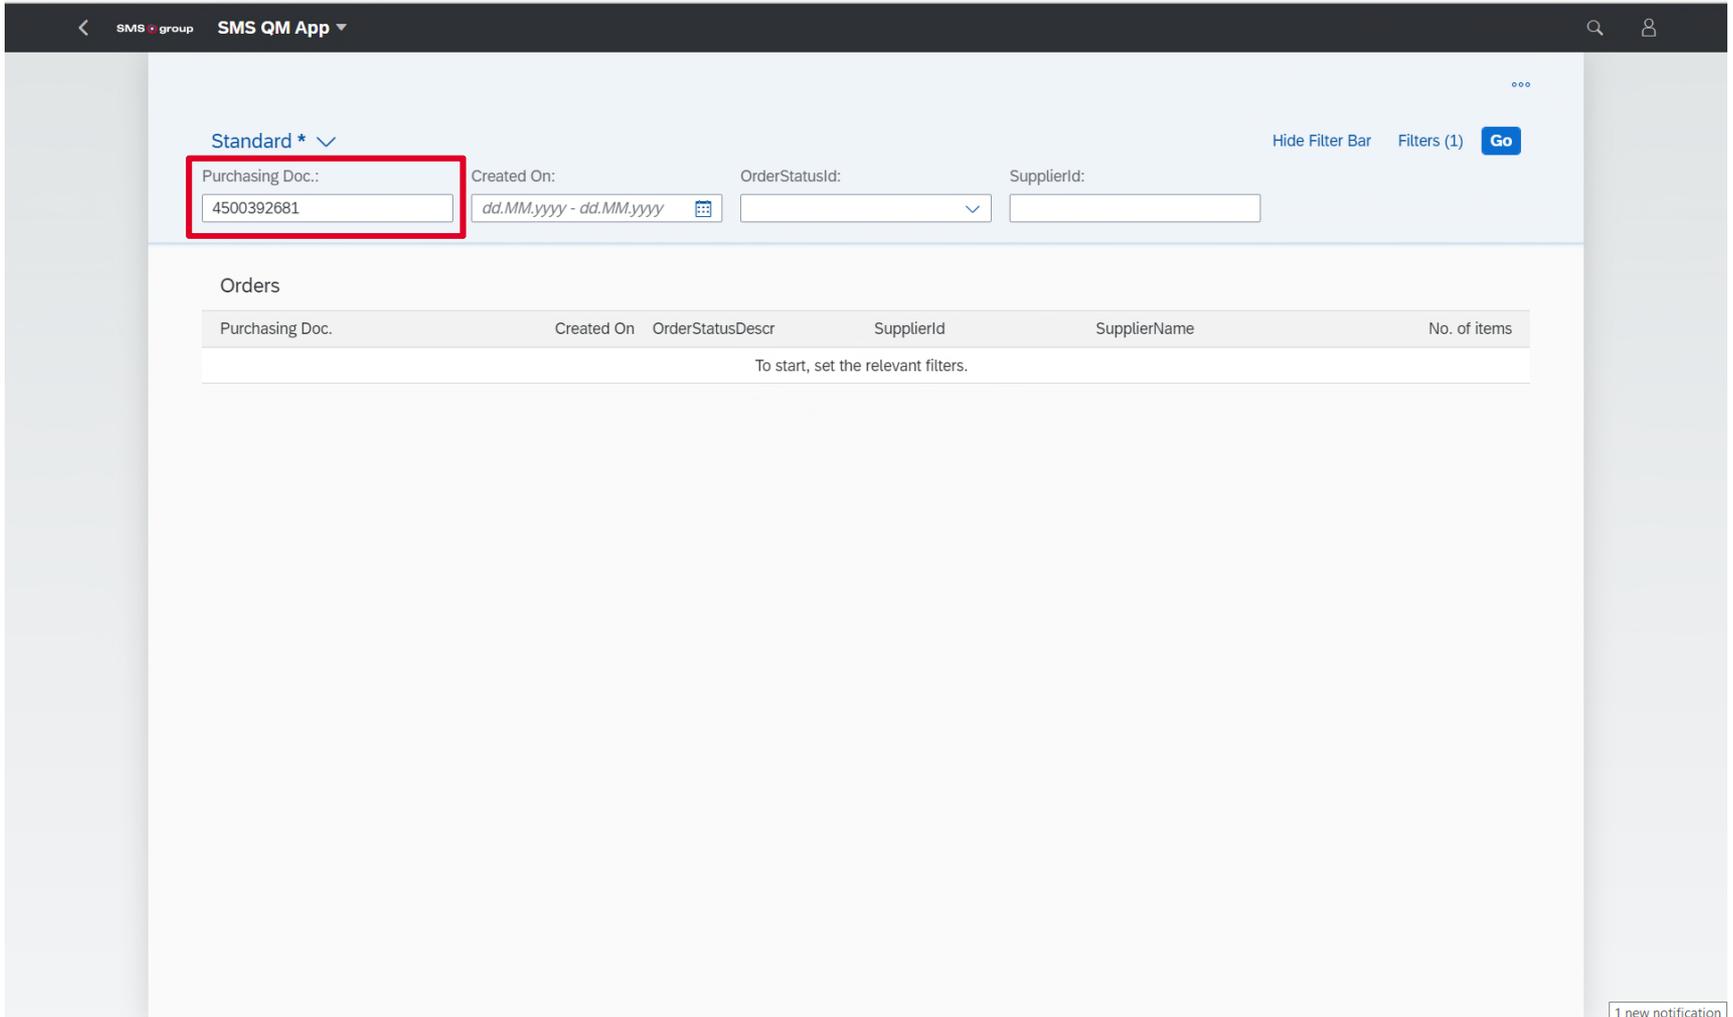


The screenshot shows the SMS QM App interface. At the top, there is a navigation bar with a back arrow, the text 'SMS group SMS QM App', a search icon, and a user profile icon. Below the navigation bar is a filter bar. On the left, there is a dropdown menu labeled 'Standard *'. To the right of the dropdown are the options 'Hide Filter Bar', 'Filters (1)', and a blue 'Go' button. The filter bar contains four input fields: 'Purchasing Doc.' (containing '4500392681'), 'Created On:' (with a date format 'dd.MM.yyyy - dd.MM.yyyy' and a calendar icon), 'OrderStatusId:' (with a dropdown arrow), and 'SupplierId:' (empty). Below the filter bar is a table titled 'Orders'. The table has a header row with columns: 'Purchasing Doc.', 'Created On', 'OrderStatusDescr', 'SupplierId', 'SupplierName', and 'No. of items'. The table body is empty, with a message 'To start, set the relevant filters.' centered below the header. In the bottom right corner of the app, there is a notification box that says '1 new notification'.

3. Press "Start" to begin selection.

The screenshot shows the SMS QM App interface. At the top, there is a navigation bar with a back arrow, the SMS group logo, and the text 'SMS QM App'. Below this, there is a filter bar with the text 'Standard *' and a dropdown arrow. To the right of the filter bar, there are links for 'Hide Filter Bar' and 'Filters (1)', followed by a blue 'Go' button which is highlighted with a red square. Below the filter bar, there are four input fields: 'Purchasing Doc.' with the value '4500392681', 'Created On' with a date range 'dd.MM.yyyy - dd.MM.yyyy' and a calendar icon, 'OrderStatusId' with a dropdown arrow, and 'SupplierId' with an empty input field. Below these fields, there is a section titled 'Orders' with a table header containing 'Purchasing Doc.', 'Created On', 'OrderStatusDescr', 'SupplierId', 'SupplierName', and 'No. of items'. The table body is empty and contains the text 'To start, set the relevant filters.' At the bottom right of the screen, there is a notification badge that says '1 new notification'.


4. Searched order is displayed. Click on the order to display the order items.

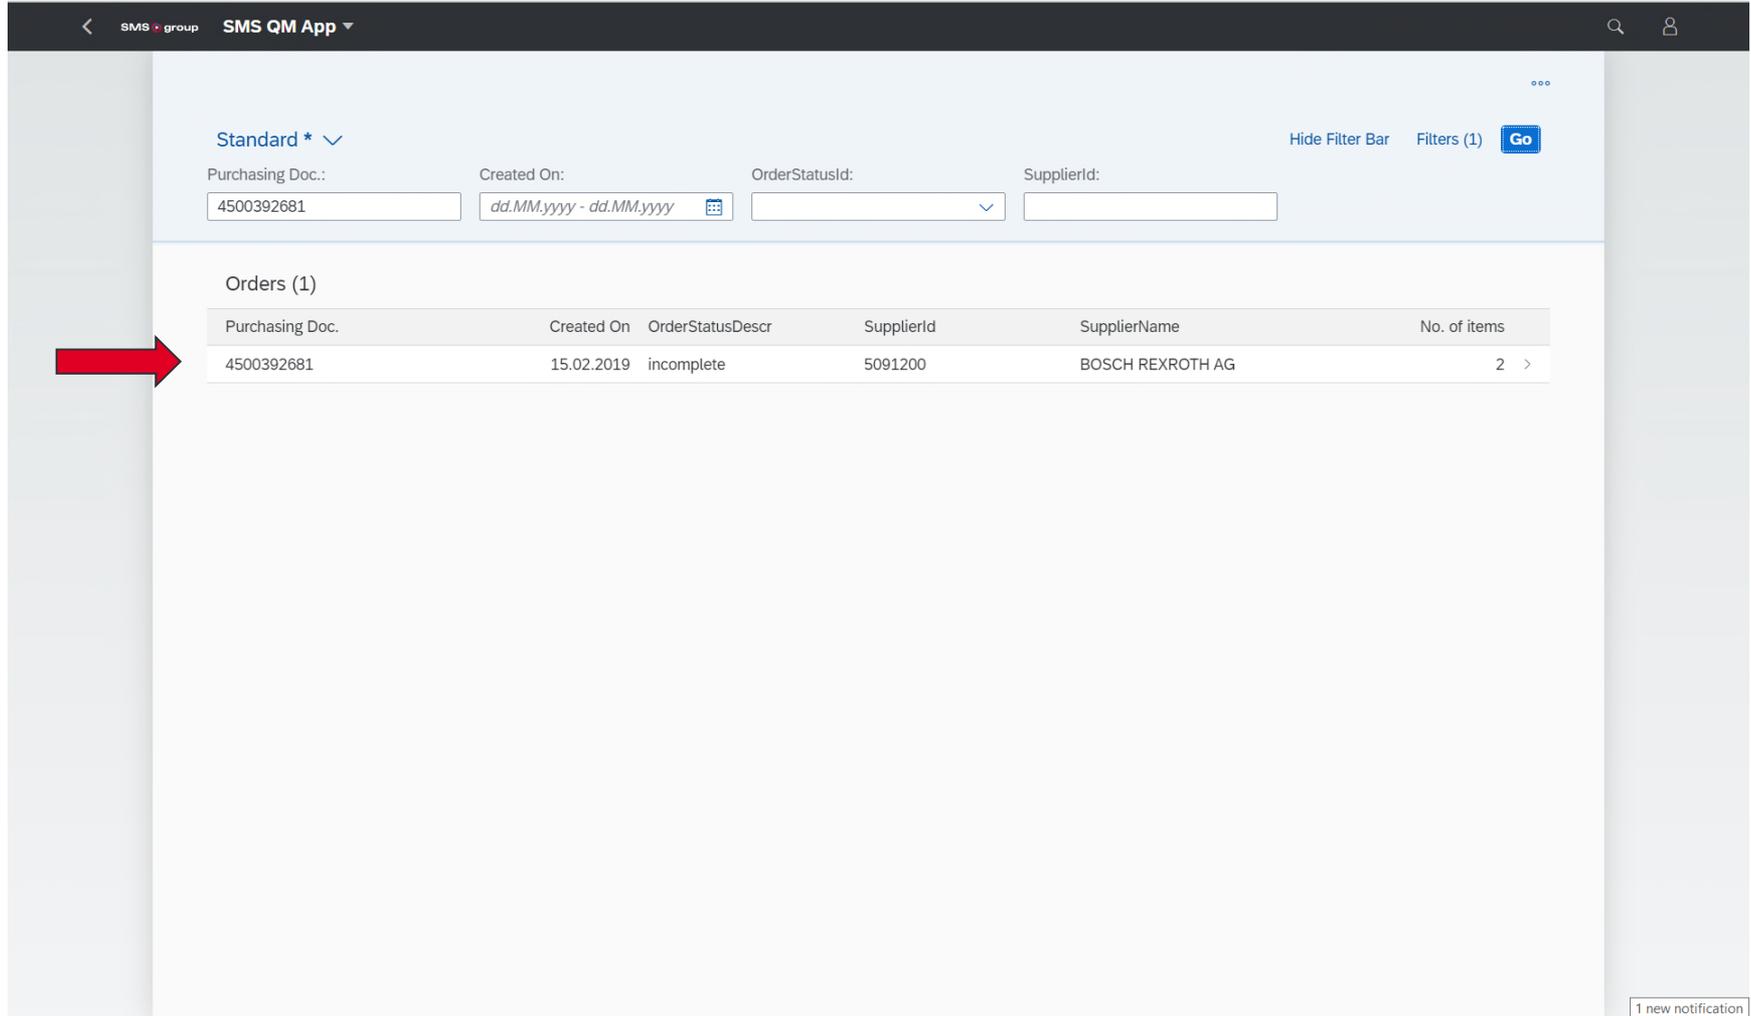

The screenshot shows the SMS QM App interface. At the top, there is a navigation bar with a back arrow, the SMS group logo, and the text 'SMS QM App'. Below this is a filter bar with a dropdown menu set to 'Standard *'. To the right of the filter bar are options for 'Hide Filter Bar', 'Filters (1)', and a 'Go' button. Below the filter bar are four input fields: 'Purchasing Doc.' with the value '4500392681', 'Created On' with a date range 'dd.MM.yyyy - dd.MM.yyyy' and a calendar icon, 'OrderStatusId' with a dropdown arrow, and 'SupplierId' with an empty input field. Below the filter bar is a table titled 'Orders (1)'. The table has the following columns: 'Purchasing Doc.', 'Created On', 'OrderStatusDescr', 'SupplierId', 'SupplierName', and 'No. of items'. The first row of the table contains the following data: '4500392681', '15.02.2019', 'incomplete', '5091200', 'BOSCH REXROTH AG', and '2 >'. A red arrow points to the first row of the table. In the bottom right corner of the app, there is a notification that says '1 new notification'.

Purchasing Doc.	Created On	OrderStatusDescr	SupplierId	SupplierName	No. of items
4500392681	15.02.2019	incomplete	5091200	BOSCH REXROTH AG	2 >

5. All order items are displayed. Click on the order item for which the documentation is to be uploaded.

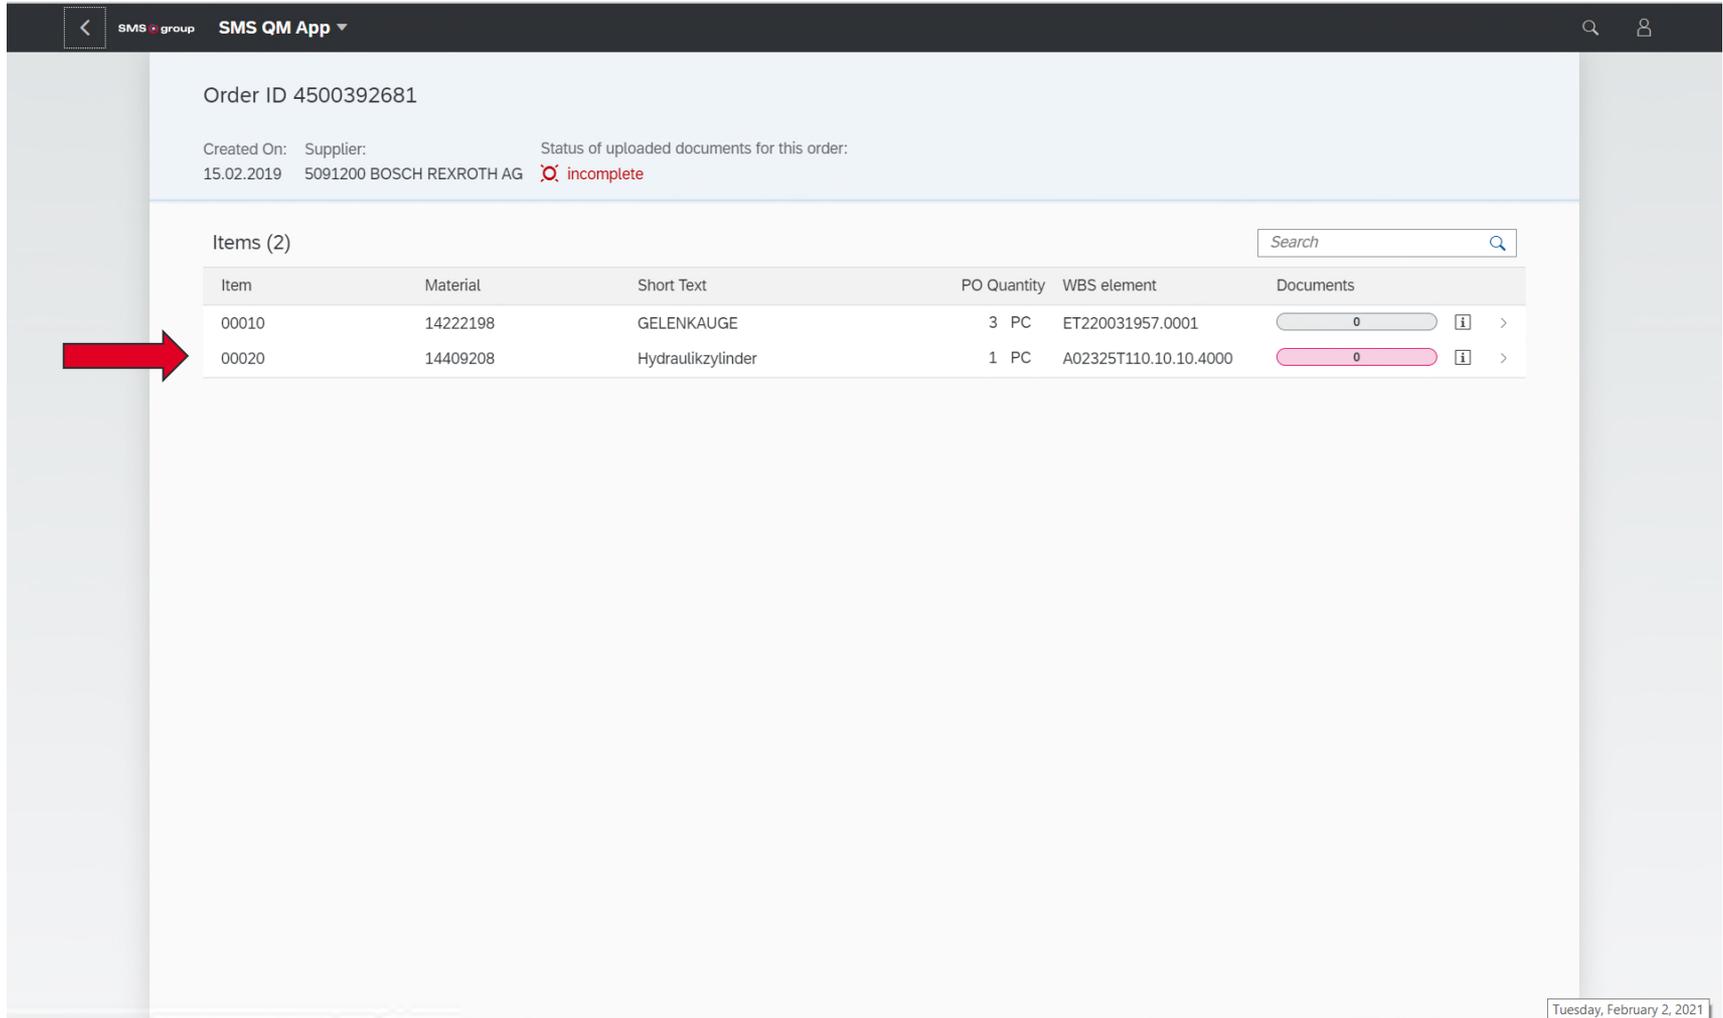

Order ID 4500392681


Created On: 15.02.2019 Supplier: 5091200 BOSCH REXROTH AG Status of uploaded documents for this order:  incomplete

Items (2)

Item	Material	Short Text	PO Quantity	WBS element	Documents
00010	14222198	GELENKAUGE	3 PC	ET220031957.0001	<input type="text" value="0"/>  
00020	14409208	Hydraulikzylinder	1 PC	A02325T110.10.10.4000	<input type="text" value="0"/>  

Tuesday, February 2, 2021

6. Click the "+ Upload Document" button to open the Upload window and add documentation.

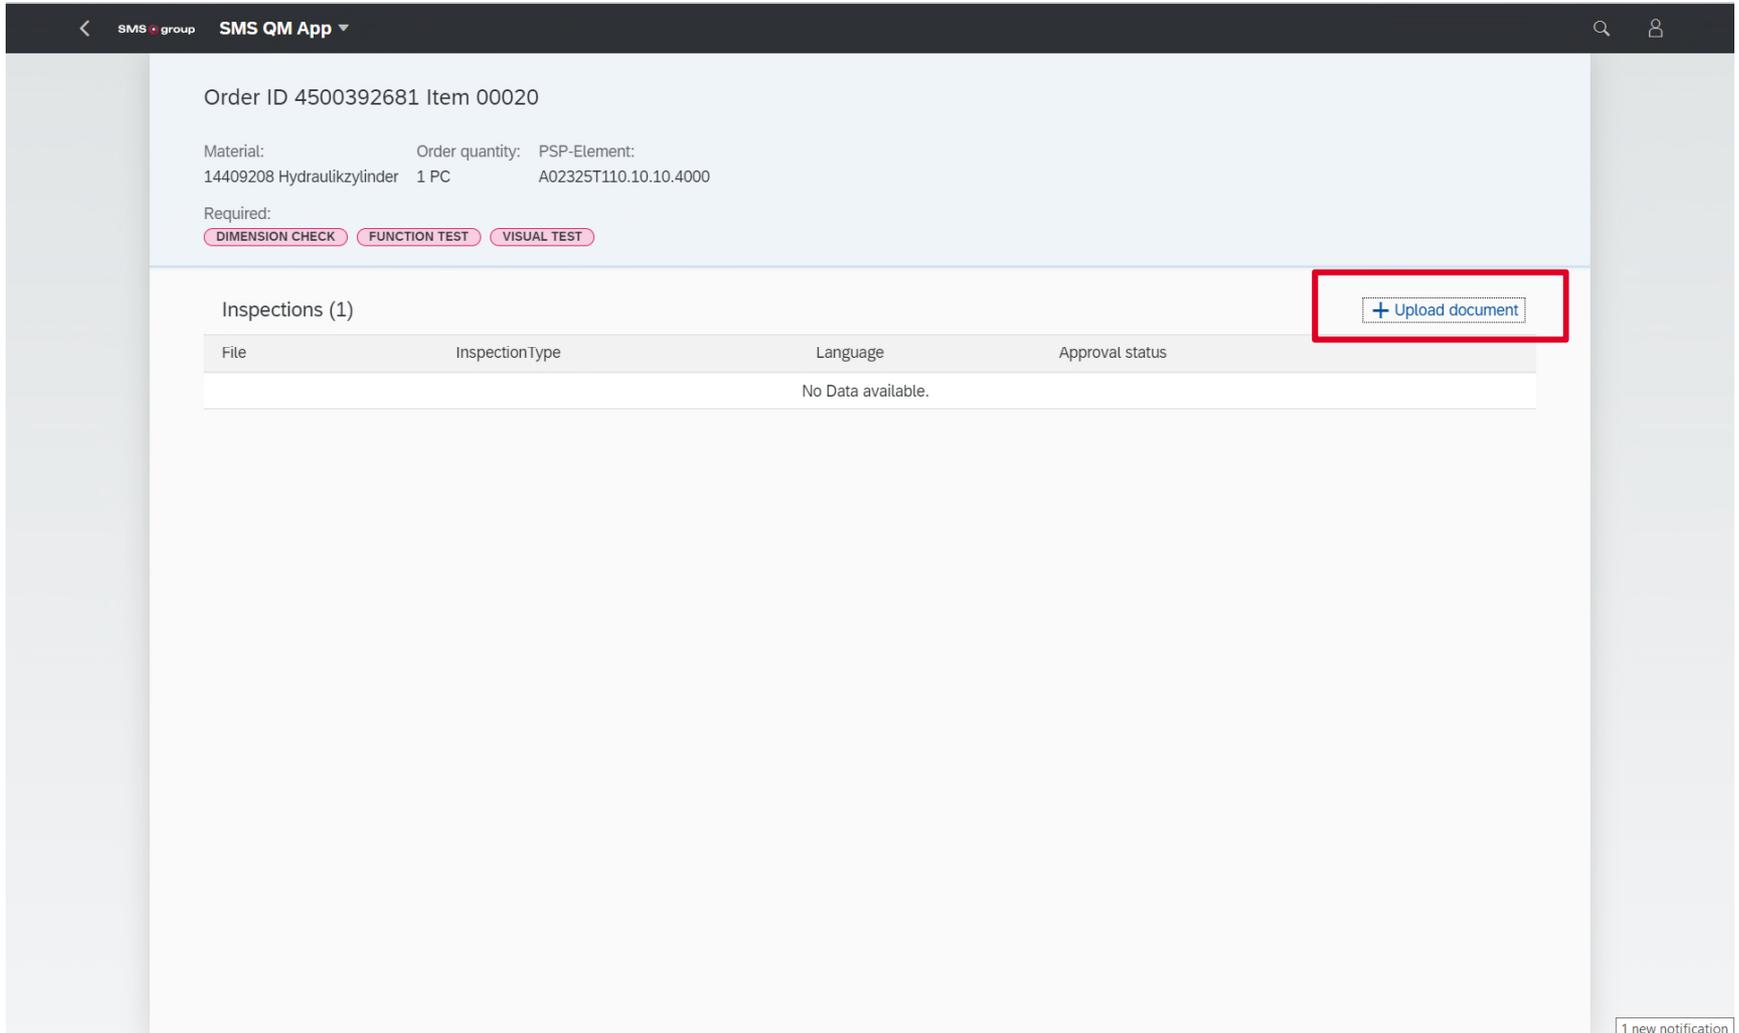

The screenshot displays the SMS QM App interface. At the top, the header shows 'SMS group' and 'SMS QM App'. Below the header, the order details are listed: 'Order ID 4500392681 Item 00020'. The material information is: 'Material: 14409208 Hydraulikzylinder', 'Order quantity: 1 PC', and 'PSP-Element: A02325T110.10.10.4000'. Under 'Required:', there are three buttons: 'DIMENSION CHECK', 'FUNCTION TEST', and 'VISUAL TEST'. Below this, there is a section for 'Inspections (1)' with a table. The table has columns for 'File', 'InspectionType', 'Language', and 'Approval status'. The table is currently empty, with the text 'No Data available.' displayed below it. A red box highlights the '+ Upload document' button in the top right corner of the inspection section. In the bottom right corner, there is a notification badge that says '1 new notification'.

Order ID 4500392681 Item 00020

Material: 14409208 Hydraulikzylinder Order quantity: 1 PC PSP-Element: A02325T110.10.10.4000

Required:

DIMENSION CHECK **FUNCTION TEST** **VISUAL TEST**


Inspections (1)

File	InspectionType	Language	Approval status
No Data available.			

[+ Upload document](#)

1 new notification

7. Expand the "Type of inspection" selection.

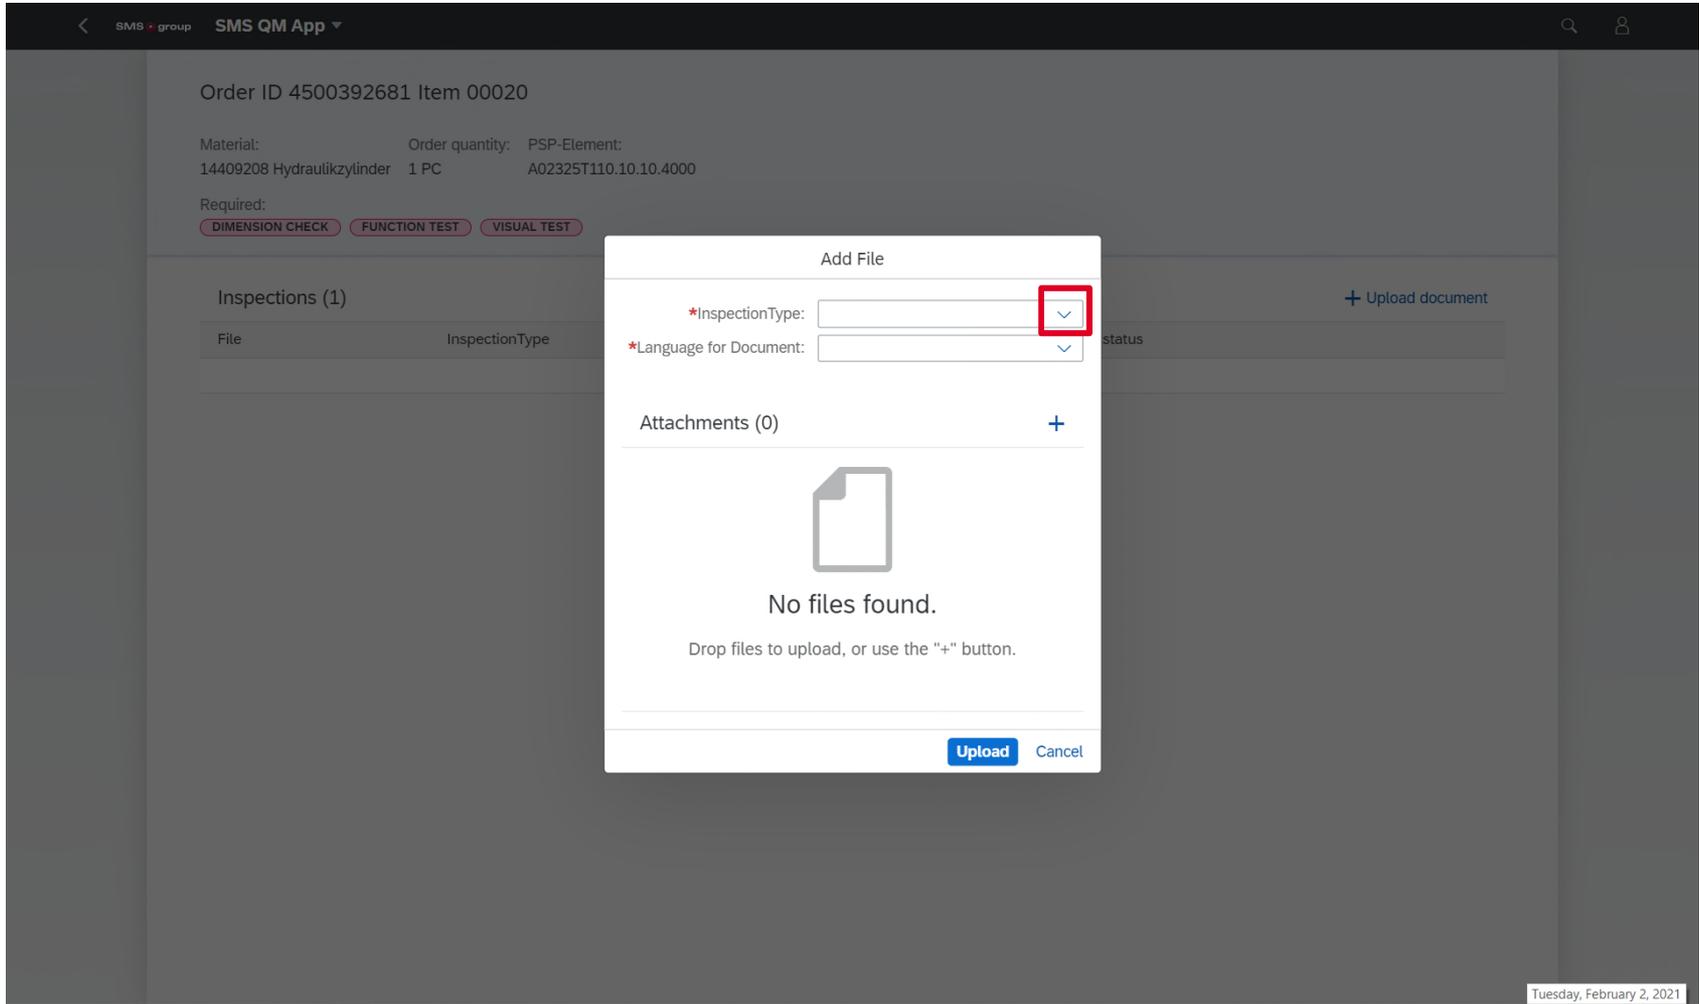

Order ID 4500392681 Item 00020

Material: 14409208 Hydraulikzylinder Order quantity: 1 PC PSP-Element: A02325T110.10.10.4000

Required: **DIMENSION CHECK** FUNCTION TEST VISUAL TEST

Inspections (1)

File	InspectionType
------	----------------

+ Upload document

status

Add File

*InspectionType: 

*Language for Document: 

Attachments (0) 



No files found.

Drop files to upload, or use the "+" button.

Upload Cancel

Tuesday, February 2, 2021

8. Select applicable inspection type/s (document type/s) that are SMS group part of the uploaded documentation/file.

Order ID 4500392681 Item 00020

Material: 14409208 Hydraulikzylinder Order quantity: 1 PC PSP-Element: A02325T110.10.10.4000

Required: DIMENSION CHECK FUNCTION TEST VISUAL TEST

Inspections (0)

File	InspectionType
------	----------------

Attachments (0)

No files found

Drop files to upload

+ Upload document

1.

2.

3.

4.

5.

6.

7.

8.

9.

10.

11.

12.

13.

14.

15.

16.

17.

18.

19.

20.

21.

22.

23.

24.

25.

26.

27.

28.

29.

30.

31.

32.

33.

34.

35.

36.

37.

38.

39.

40.

41.

42.

43.

44.

45.

46.

47.

48.

49.

50.

51.

52.

53.

54.

55.

56.

57.

58.

59.

60.

61.

62.

63.

64.

65.

66.

67.

68.

69.

70.

71.

72.

73.

74.

75.

76.

77.

78.

79.

80.

81.

82.

83.

84.

85.

86.

87.

88.

89.

90.

91.

92.

93.

94.

95.

96.

97.

98.

99.

100.

101.

102.

103.

104.

105.

106.

107.

108.

109.

110.

111.

112.

113.

114.

115.

116.

117.

118.

119.

120.

121.

122.

123.

124.

125.

126.

127.

128.

129.

130.

131.

132.

133.

134.

135.

136.

137.

138.

139.

140.

141.

142.

143.

144.

145.

146.

147.

148.

149.

150.

151.

152.

153.

154.

155.

156.

157.

158.

159.

160.

161.

162.

163.

164.

165.

166.

167.

168.

169.

170.

171.

172.

173.

174.

175.

176.

177.

178.

179.

180.

181.

182.

183.

184.

185.

186.

187.

188.

189.

190.

191.

192.

193.

194.

195.

196.

197.

198.

199.

200.

201.

202.

203.

204.

205.

206.

207.

208.

209.

210.

211.

212.

213.

214.

215.

216.

217.

218.

219.

220.

221.

222.

223.

224.

225.

226.

227.

228.

229.

230.

231.

232.

233.

234.

235.

236.

237.

238.

239.

240.

241.

242.

243.

244.

245.

246.

247.

248.

249.

250.

251.

252.

253.

254.

255.

256.

257.

258.

259.

260.

261.

262.

263.

264.

265.

266.

267.

268.

269.

270.

271.

272.

273.

274.

275.

276.

277.

278.

279.

280.

281.

282.

283.

284.

285.

286.

287.

288.

289.

290.

291.

292.

293.

294.

295.

296.

297.

298.

299.

300.

301.

302.

303.

304.

305.

306.

307.

308.

309.

310.

311.

312.

313.

314.

315.

316.

317.

318.

319.

320.

321.

322.

323.

324.

325.

326.

327.

328.

329.

330.

331.

332.

333.

334.

335.

336.

337.

338.

339.

340.

341.

342.

343.

344.

345.

346.

347.

348.

349.

350.

351.

352.

353.

354.

355.

356.

357.

358.

359.

360.

361.

362.

363.

364.

365.

366.

367.

368.

369.

370.

371.

372.

373.

374.

375.

376.

377.

378.

379.

380.

381.

382.

383.

384.

385.

386.

387.

388.

389.

390.

391.

392.

393.

394.

395.

396.

397.

398.

399.

400.

401.

402.

403.

404.

405.

406.

407.

408.

409.

410.

411.

412.

413.

414.

415.

416.

417.

418.

419.

420.

421.

422.

423.

424.

425.

426.

427.

428.

429.

430.

431.

432.

433.

434.

435.

436.

437.

438.

439.

440.

441.

442.

443.

444.

445.

446.

447.

448.

449.

450.

451.

452.

453.

454.

455.

456.

457.

458.

459.

460.

461.

462.

463.

464.

465.

466.

467.

468.

469.

470.

471.

472.

473.

474.

475.

476.

477.

478.

479.

480.

481.

482.

483.

484.

485.

486.

487.

488.

489.

490.

491.

492.

493.

494.

495.

496.

497.

498.

499.

500.

501.

502.

503.

504.

505.

506.

507.

508.

509.

510.

511.

512.

513.

514.

515.

516.

517.

518.

519.

520.

521.

522.

523.

524.

525.

526.

527.

528.

529.

530.

531.

532.

533.

534.

535.

536.

537.

538.

539.

540.

541.

542.

543.

544.

545.

546.

547.

548.

549.

550.

551.

552.

553.

554.

555.

556.

557.

558.

559.

560.

561.

562.

563.

564.

565.

566.

567.

568.

569.

570.

571.

572.

573.

574.

575.

576.

577.

578.

579.

580.

581.

582.

583.

584.

585.

586.

587.

588.

589.

590.

591.

592.

593.

594.

595.

596.

597.

598.

599.

600.

601.

602.

603.

604.

605.

606.

607.

608.

609.

610.

611.

612.

613.

614.

615.

616.

617.

618.

619.

620.

621.

622.

623.

624.

625.

626.

627.

628.

629.

630.

631.

632.

633.

634.

635.

636.

637.

638.

639.

640.

641.

642.

643.

644.

645.

646.

647.

648.

649.

650.

651.

652.

653.

654.

655.

656.

657.

658.

659.

660.

661.

662.

663.

664.

665.

666.

667.

668.

669.

670.

671.

672.

673.

674.

675.

676.

677.

678.

679.

680.

681.

682.

683.

684.

685.

686.

687.

688.

689.

690.

691.

692.

693.

694.

695.

696.

697.

698.

699.

700.

701.

702.

703.

704.

705.

706.

707.

708.

709.

710.

711.

712.

713.

714.

715.

716.

717.

718.

719.

720.

721.

722.

723.

724.

725.

726.

727.

728.

729.

730.

731.

732.

733.

734.

735.

736.

737.

738.

739.

740.

741.

742.

743.

744.

745.

746.

747.

748.

749.

750.

751.

752.

753.

754.

755.

756.

757.

758.

759.

760.

761.

762.

763.

764.

765.

766.

767.

768.

769.

770.

771.

772.

773.

774.

775.

776.

777.

778.

779.

780.

781.

782.

783.

784.

785.

786.

787.

788.

789.

790.

791.

792.

793.

794.

795.

796.

797.

798.

799.

800.

801.

802.

803.

804.

805.

806.

807.

808.

809.

810.

811.

812.

813.

814.

815.

816.

817.

818.

819.

820.

821.

822.

823.

824.

825.

826.

827.

828.

829.

830.

831.

832.

833.

834.

835.

836.

837.

838.

839.

840.

841.

842.

843.

844.

845.

846.

847.

848.

849.

850.

851.

852.

853.

854.

855.

856.

857.

858.

859.

860.

861.

862.

863.

864.

865.

866.

867.

868.

869.

870.

871.

872.

873.

874.

875.

876.

877.

878.

879.

880.

881.

882.

883.

884.

885.

886.

887.

888.

889.

890.

891.

892.

893.

894.

895.

896.

897.

898.

899.

900.

901.

902.

903.

904.

905.

906.

907.

908.

909.

910.

911.

912.

913.

914.

915.

916.

917.

918.

919.

920.

921.

922.

923.

924.

925.

926.

927.

928.

929.

930.

931.

932.

933.

934.

935.

936.

937.

938.

939.

940.

941.

942.

943.

944.

945.

946.

947.

948.

949.

950.

951.

952.

953.

954.

955.

956.

957.

958.

959.

960.

961.

962.

963.

964.

965.

966.

967.

968.

969.

970.

971.

972.

973.

974.

975.

976.

977.

978.

979.

980.

981.

982.

983.

984.

985.

986.

987.

988.

989.

990.

991.

992.

993.

994.

995.

996.

997.

998.

999.

1000.

1001.

1002.

1003.

1004.

1005.

1006.

1007.


1008.

1009.

1010.

10

9. Set the language of the document. Multiple selection is possible.

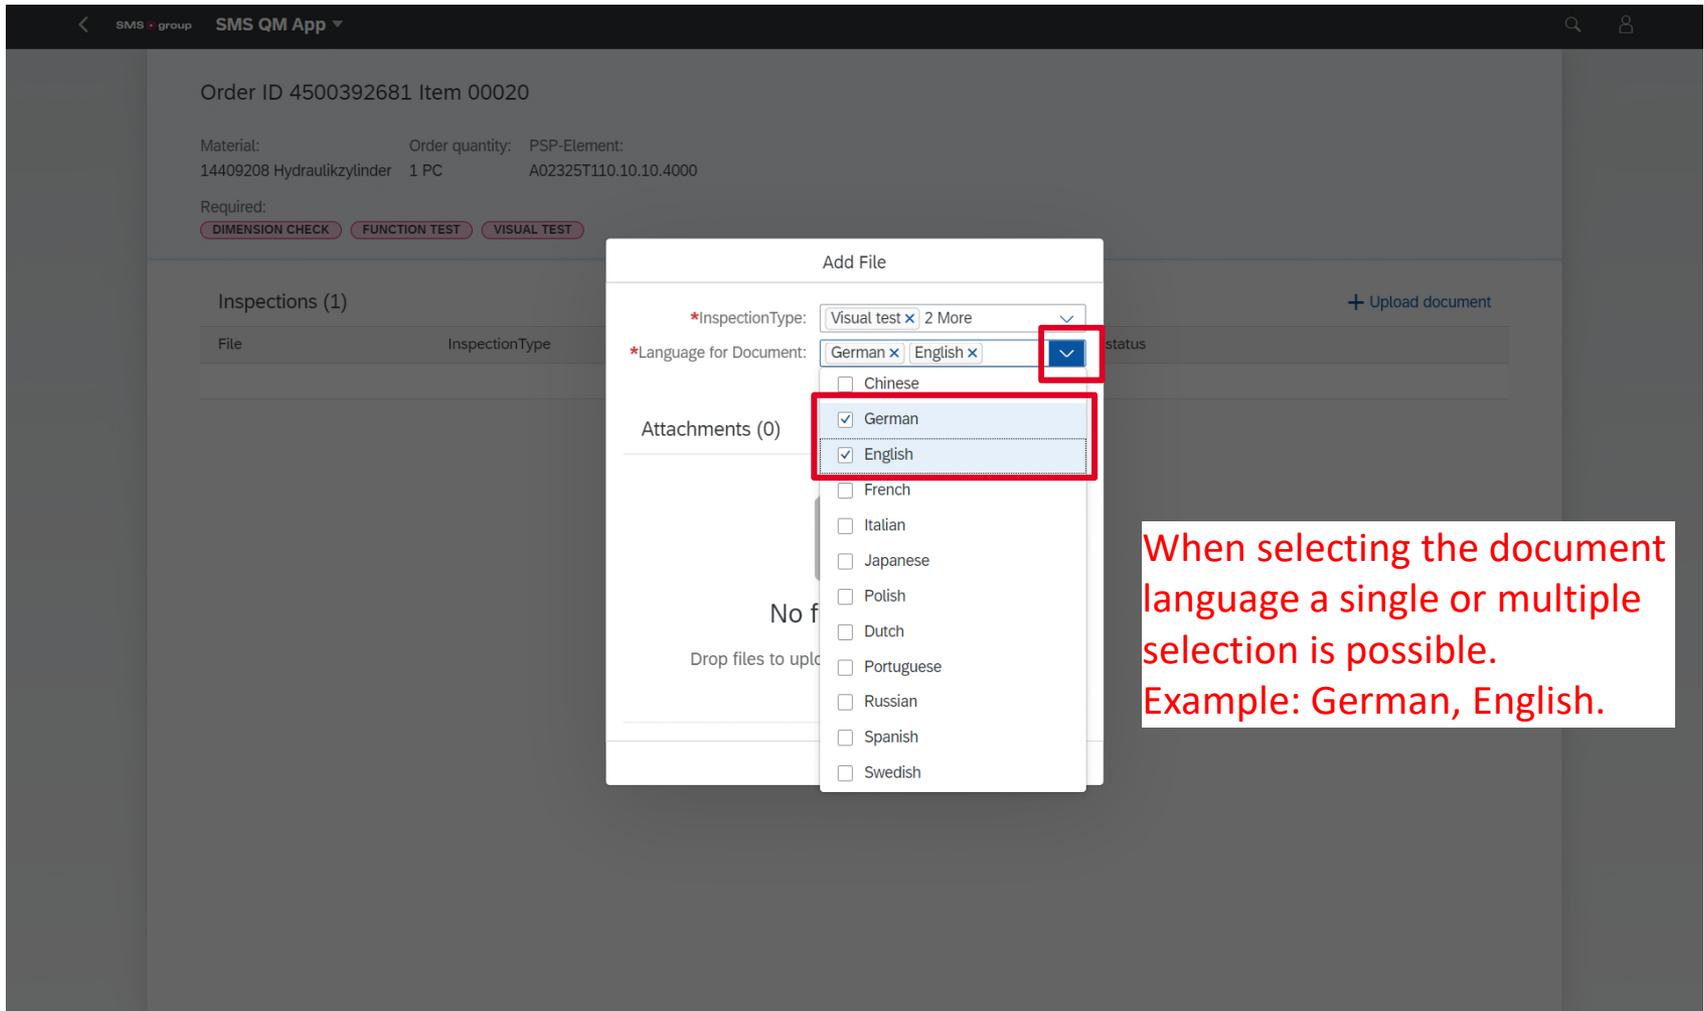

Order ID 4500392681 Item 00020

Material: 14409208 Hydraulikzylinder Order quantity: 1 PC PSP-Element: A02325T110.10.10.4000

Required: DIMENSION CHECK FUNCTION TEST VISUAL TEST

Inspections (1)

File	InspectionType
------	----------------

Attachments (0)

No files found

Drop files to upload

+ Upload document

status

Add File

*InspectionType: Visual test x 2 More

*Language for Document: German x English x

- Chinese
- German
- English
- French
- Italian
- Japanese
- Polish
- Dutch
- Portuguese
- Russian
- Spanish
- Swedish

When selecting the document language a single or multiple selection is possible.
Example: German, English.

10. Drag documentation file (PDF) to the upload field.

Order ID 4500392681 Item 00020

Material: 14409208 Hydraulikzylinder
Order quantity: 1 PC
PSP-Element: A02325T110.10.10.4000

Required: DIMENSION CHECK FUNCTION TEST VISUAL TEST

Inspections (1)

File	InspectionType
------	----------------

+ Upload document

status

Add File

*InspectionType: Visual test x 2 More

*Language for Document: German x English x


Attachments (0) +

Drop files to upload

Upload Cancel


Attention: Only one file can be uploaded per upload process!!!

11. One File is placed in the upload field, then click on "Upload".

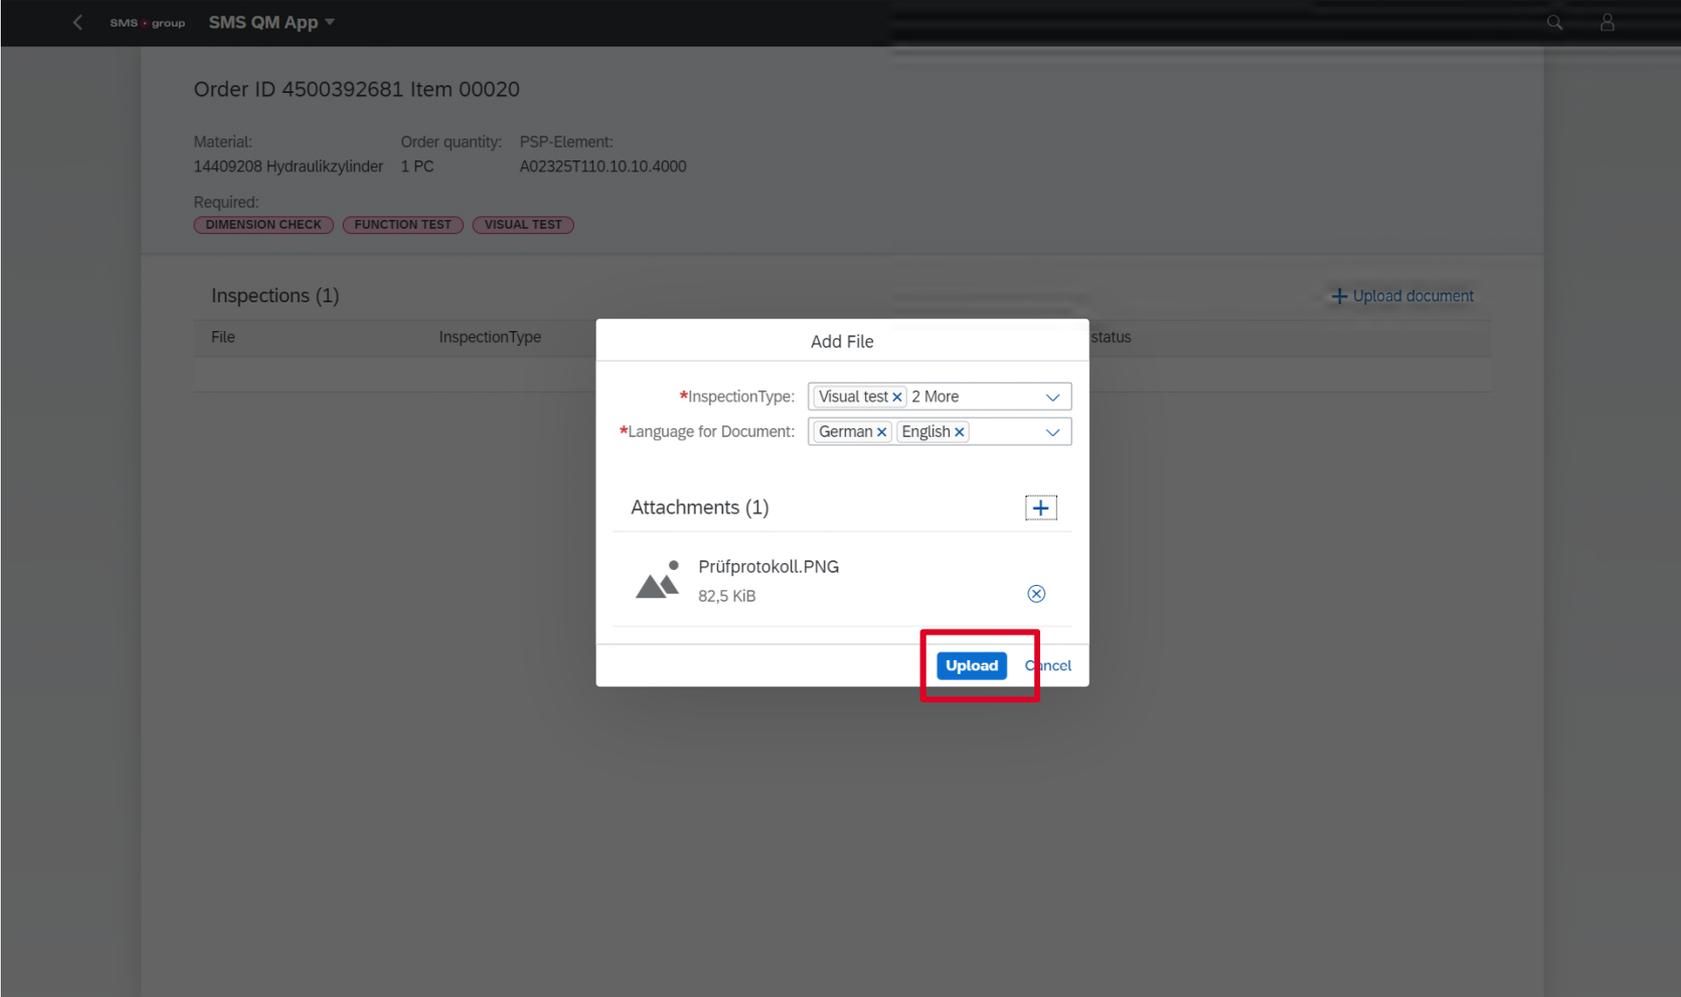

The screenshot displays the SMS QM App interface. At the top, the header shows 'SMS group' and 'SMS QM App'. Below the header, the main content area displays order information: 'Order ID 4500392681 Item 00020'. Further down, material and order quantity details are listed: 'Material: 14409208 Hydraulikzylinder 1 PC' and 'PSP-Element: A02325T110.10.10.4000'. A 'Required:' section contains three buttons: 'DIMENSION CHECK', 'FUNCTION TEST', and 'VISUAL TEST'. Below this, an 'Inspections (1)' section is visible, with a '+ Upload document' button. A modal dialog box titled 'Add File' is open in the center. It features two dropdown menus: '*InspectionType:' set to 'Visual test x 2 More' and '*Language for Document:' set to 'German x' and 'English x'. Below these is an 'Attachments (1)' section with a '+ Add' button. A single attachment is listed: 'Prüfprotokoll.PNG' with a size of '82,5 KiB'. At the bottom of the dialog, there are 'Upload' and 'Cancel' buttons. The 'Upload' button is highlighted with a red rectangular box.

12. Documentation is attached. Click on filename to open documentation.

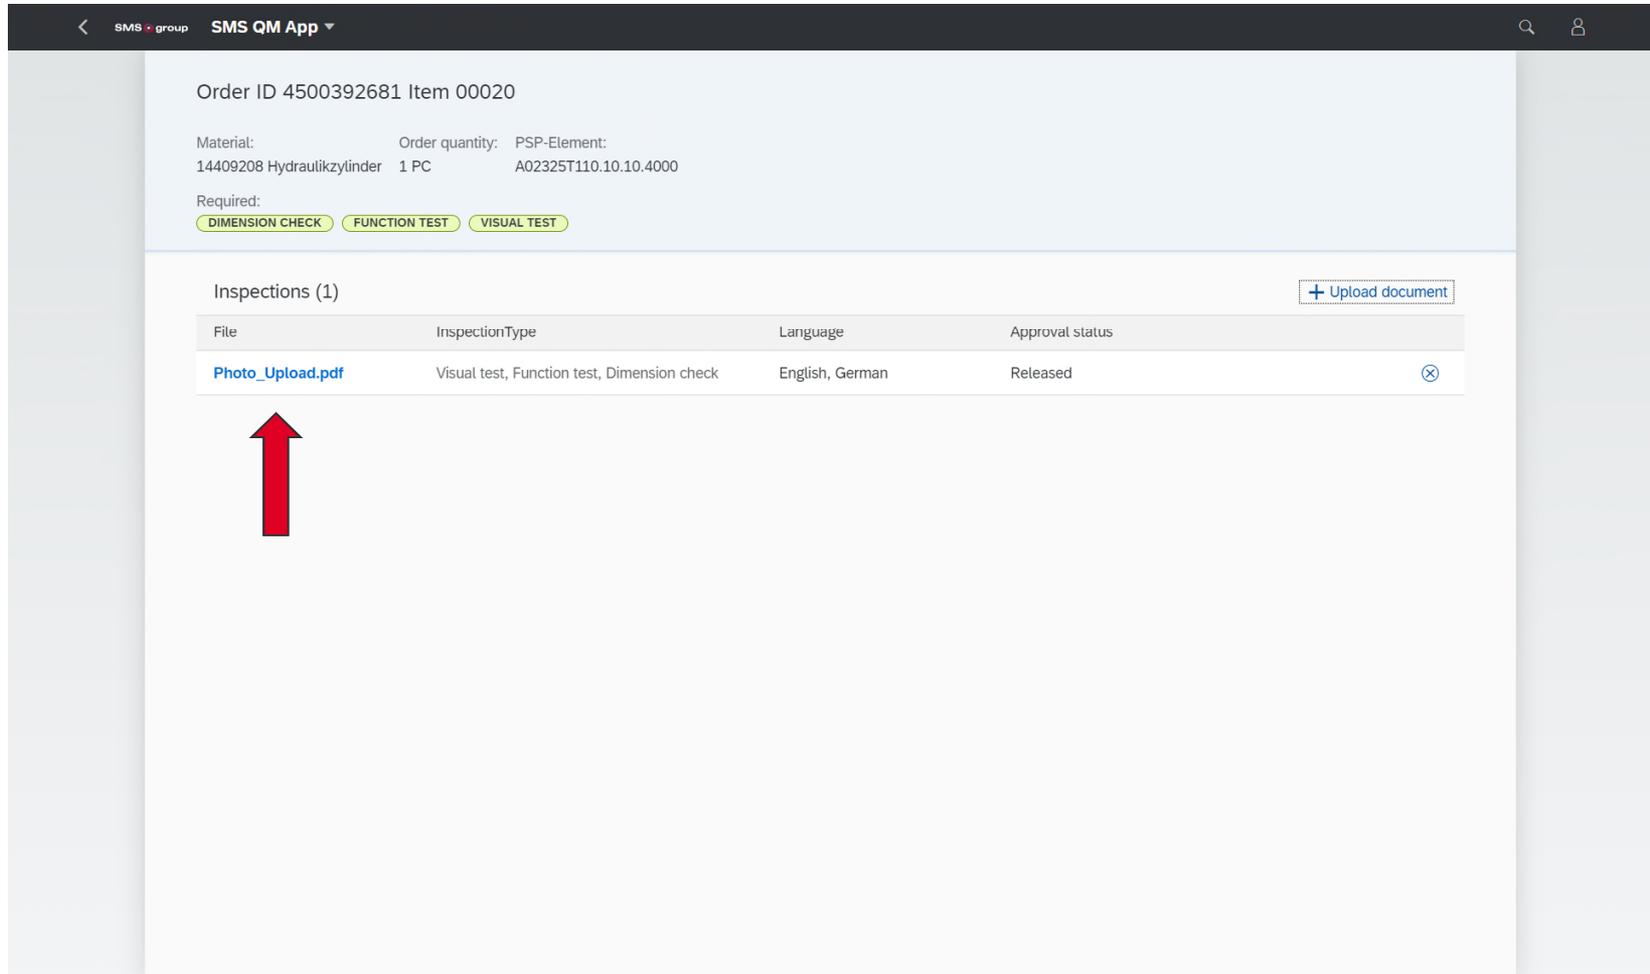

Order ID 4500392681 Item 00020


Material: 14409208 Hydraulikzylinder Order quantity: 1 PC PSP-Element: A02325T110.10.10.4000

Required: DIMENSION CHECK FUNCTION TEST VISUAL TEST

Inspections (1) + Upload document

File	InspectionType	Language	Approval status
Photo Upload.pdf	Visual test, Function test, Dimension check	English, German	Released ⊗

13. Jumping back to previous views is possible via the arrow key in the menu bar.

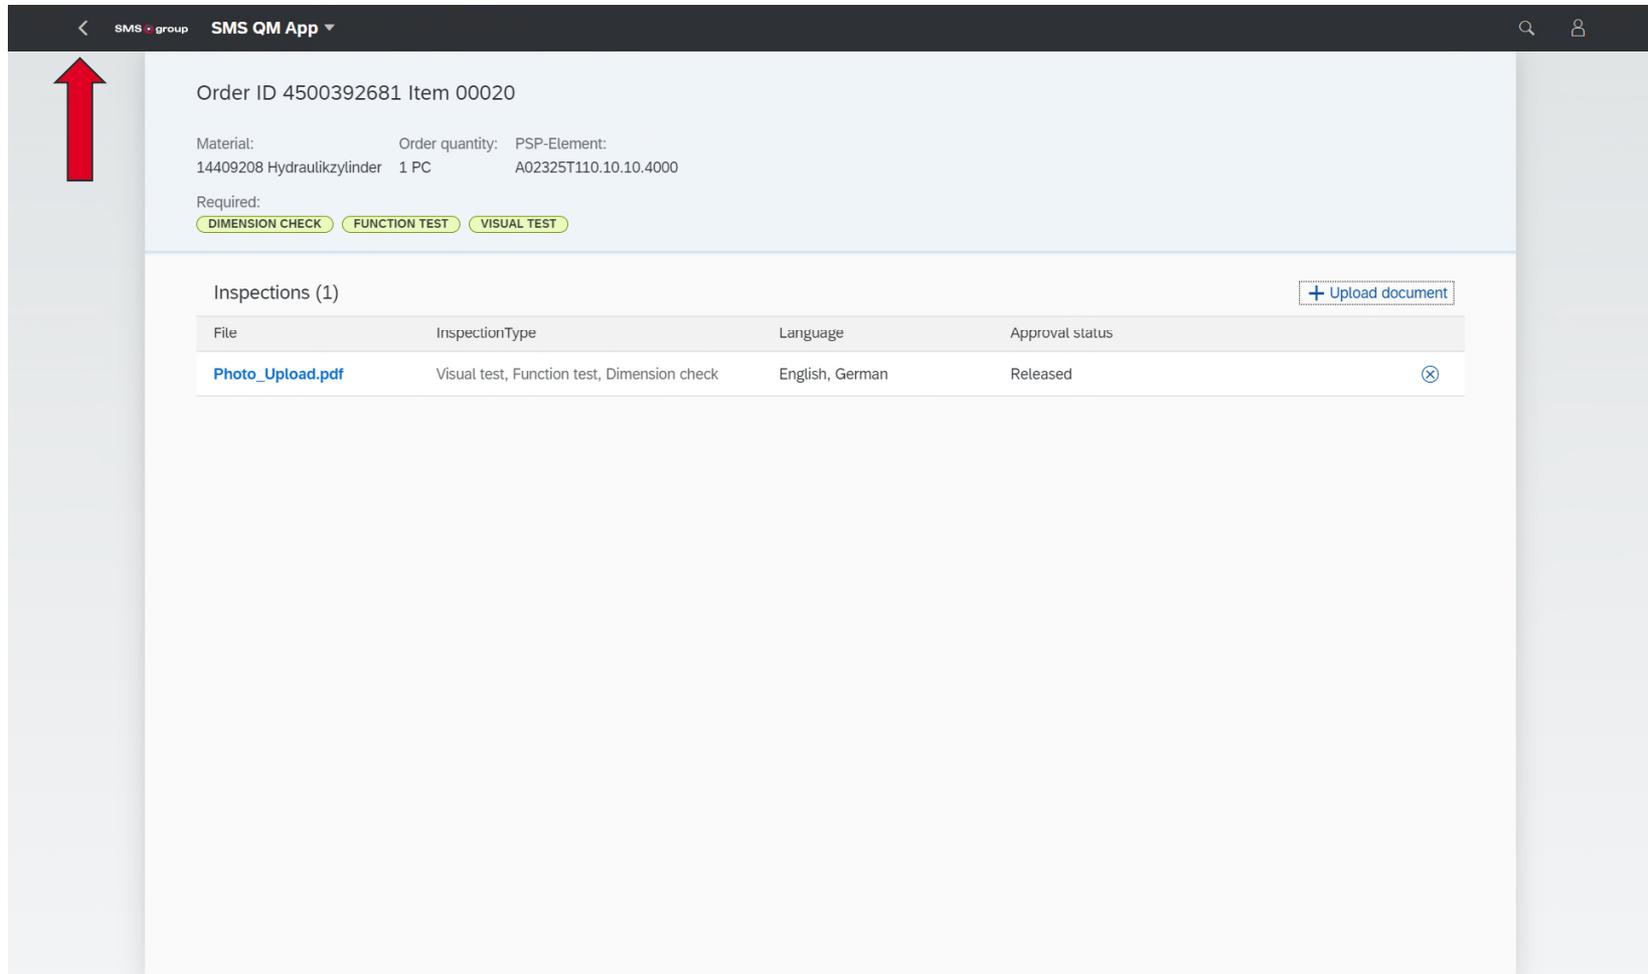

The screenshot shows the SMS QM App interface. At the top, there is a dark navigation bar with a back arrow icon on the left, the text 'SMS group SMS QM App', and search and user icons on the right. A red arrow points to the back arrow icon. Below the navigation bar, the main content area displays order information: 'Order ID 4500392681 Item 00020'. It lists 'Material: 14409208 Hydraulikzylinder 1 PC' and 'PSP-Element: A02325T110.10.10.4000'. Under 'Required:', there are three buttons: 'DIMENSION CHECK', 'FUNCTION TEST', and 'VISUAL TEST'. Below this is a section titled 'Inspections (1)' with a '+ Upload document' button. A table lists one inspection:

File	InspectionType	Language	Approval status
Photo_Upload.pdf	Visual test, Function test, Dimension check	English, German	Released ⊗

14. Delete documentation.

Order ID 4500392681 Item 00020

Material: 14409208 Hydraulikzylinder Order quantity: 1 PC PSP-Element: A02325T110.10.10.4000


Required: DIMENSION CHECK FUNCTION TEST VISUAL TEST

Inspections (1) + Upload document

File	InspectionType	Language	Approval status	
Photo_Upload.pdf	Visual test, Function test, Dimension check	English, German	Released	



14. Confirm with "OK" to delete the file.

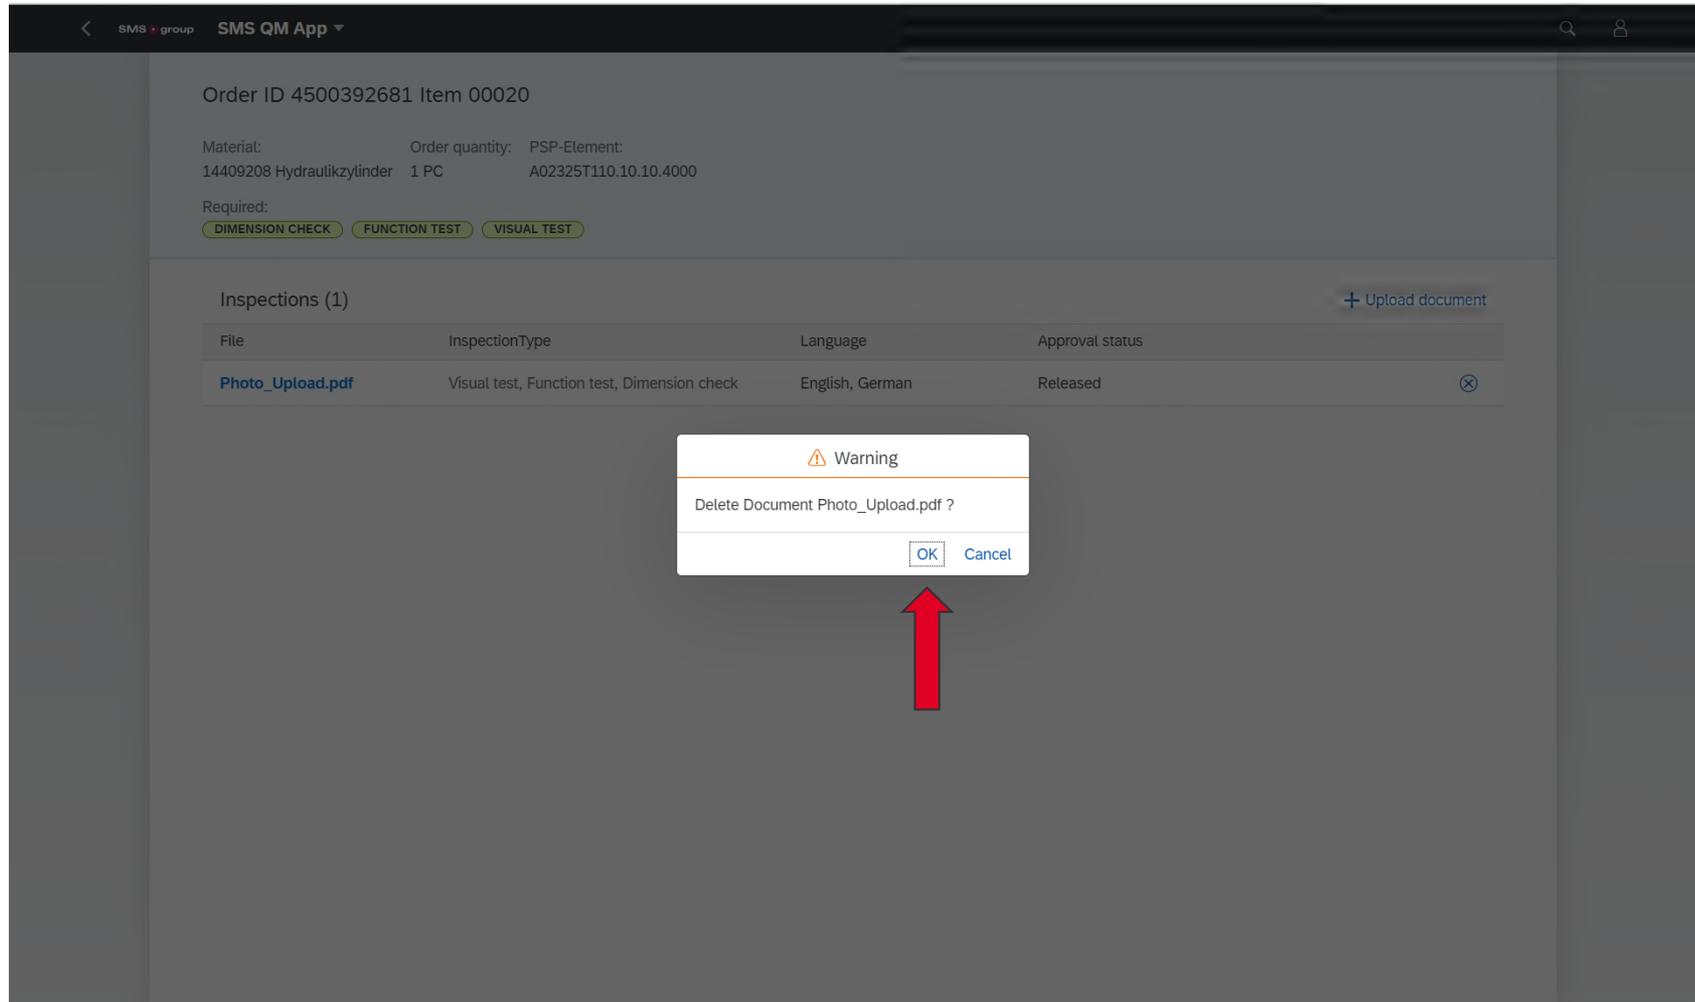

The screenshot shows the SMS QM App interface. At the top, it displays 'Order ID 4500392681 Item 00020'. Below this, there are fields for 'Material: 14409208 Hydraulikzylinder', 'Order quantity: 1 PC', and 'PSP-Element: A02325T110.10.10.4000'. Under 'Required:', there are three buttons: 'DIMENSION CHECK', 'FUNCTION TEST', and 'VISUAL TEST'. A section titled 'Inspections (1)' contains a table with the following data:


File	InspectionType	Language	Approval status
Photo_Upload.pdf	Visual test, Function test, Dimension check	English, German	Released

A warning dialog box is centered on the screen, titled 'Warning'. It contains the text 'Delete Document Photo_Upload.pdf?' and two buttons: 'OK' and 'Cancel'. A red arrow points to the 'OK' button.


15. Additional display of test types in menu bar

The documentation required according to SN200, drawing, specification etc. must generally be uploaded for the respective order item.

Furthermore, in case of separate internal processing, the required documents are additionally listed in red in the menu bar.

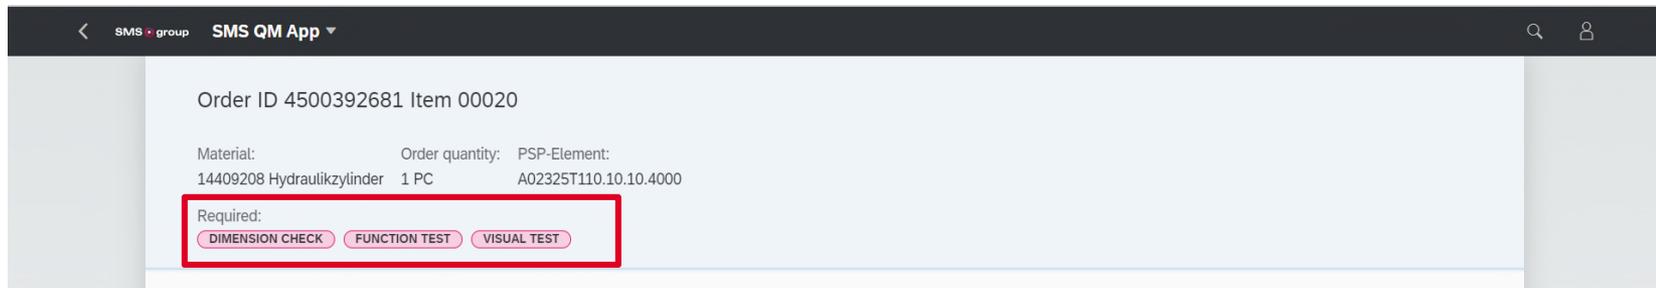

If the documentation is uploaded and marked with the required test types, the status changes and the documents are displayed in green in the menu bar.

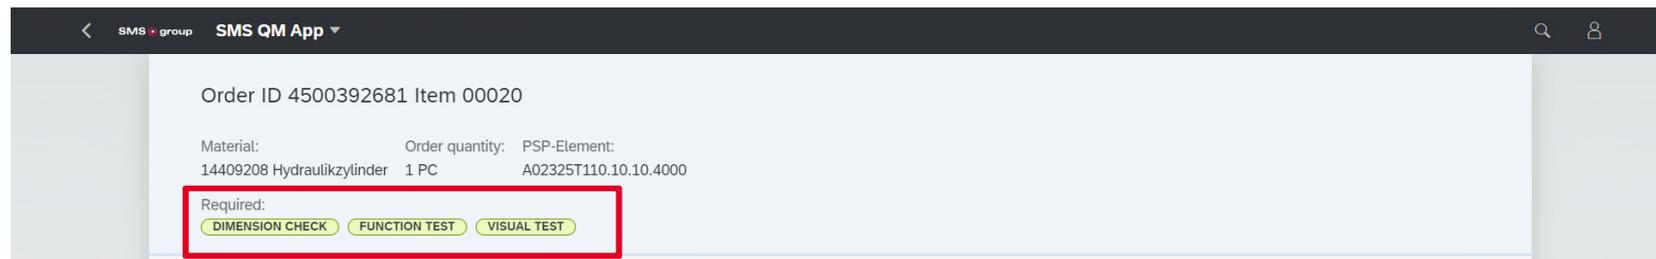

Thank You!

We transform ... the world of metals.

SMS  **group**